



- ▲ +S: +遥感
- ▲ LS: 负载共享
- ▲ -S: -遥感
- ▲ TRIM: 调整输出电压
- ▲ RC2: 遥感开关
- ▲ RCG: 对地遥感开关
- ▲ AUX: 辅路输出
- ▲ AUXG: 辅路输出电源对
- ▲ P
- ▲ P OK GND: 电源对地正常

